



---

# User's manual

## FLIR CM83

600 A AC/DC power clamp meter







# User's manual

## FLIR CM83





# Table of contents

---

<b>1</b>	<b>Disclaimers</b> .....	<b>1</b>
	1.1 Copyright.....	1
	1.2 Quality assurance .....	1
	1.3 Documentation updates .....	1
	1.4 Disposal of electronic waste.....	1
<b>2</b>	<b>Safety information</b> .....	<b>2</b>
<b>3</b>	<b>Introduction</b> .....	<b>6</b>
	3.1 Key features.....	6
<b>4</b>	<b>Description</b> .....	<b>7</b>
	4.1 Meter parts.....	7
	4.2 Function switch .....	8
	4.3 Function buttons .....	9
	4.4 Display icons and indicators .....	10
<b>5</b>	<b>Operation</b> .....	<b>13</b>
	5.1 Powering the meter .....	13
	5.2 Auto/Manual select mode .....	13
	5.3 Auto/Manual range mode .....	14
	5.4 Hold mode .....	14
	5.5 Silent mode .....	14
	5.6 Voltage and current measurements.....	15
	5.7 VoltSense (non-contact voltage).....	19
	5.8 Power measurements .....	19
	5.9 Resistance measurements .....	24
	5.10 Capacitance measurements .....	25
	5.11 Continuity test.....	25
	5.12 Diode test .....	26
	5.13 Streaming measurement data using Bluetooth .....	26
<b>6</b>	<b>Maintenance</b> .....	<b>28</b>
	6.1 Cleaning and storage.....	28
	6.2 Battery replacement .....	28
<b>7</b>	<b>Technical specifications</b> .....	<b>29</b>
	7.1 General specifications .....	29
	7.2 Electrical specifications .....	30

## Table of contents

---

<b>8</b>	<b>Warranties</b> .....	<b>36</b>
8.1	FLIR Global Limited Lifetime Warranty .....	36
8.2	FLIR Test and Measurement Limited 2 Year Warranty.....	37

# 1 Disclaimers

---

## 1.1 Copyright

© 2013, FLIR Systems, Inc. All rights reserved worldwide. No parts of the software including source code may be reproduced, transmitted, transcribed or translated into any language or computer language in any form or by any means, electronic, magnetic, optical, manual or otherwise, without the prior written permission of FLIR Systems.

The documentation must not, in whole or part, be copied, photocopied, reproduced, translated or transmitted to any electronic medium or machine readable form without prior consent, in writing, from FLIR Systems.

Names and marks appearing on the products herein are either registered trademarks or trademarks of FLIR Systems and/or its subsidiaries. All other trademarks, trade names or company names referenced herein are used for identification only and are the property of their respective owners.

## 1.2 Quality assurance

The Quality Management System under which these products are developed and manufactured has been certified in accordance with the ISO 9001 standard.

FLIR Systems is committed to a policy of continuous development; therefore we reserve the right to make changes and improvements on any of the products without prior notice.

## 1.3 Documentation updates

Our manuals are updated several times per year, and we also issue product-critical notifications of changes on a regular basis.

To access the latest manuals and notifications, go to the Download tab at:

<http://support.flir.com>

It only takes a few minutes to register online. In the download area you will also find the latest releases of manuals for our other products, as well as manuals for our historical and obsolete products.

## 1.4 Disposal of electronic waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

## 2 Safety information

---

### Note

Before operating the device, you must read, understand, and follow all instructions, dangers, warnings, cautions, and notes.

### Note

FLIR Systems reserves the right to discontinue models, parts or accessories, and other items, or to change specifications at any time without prior notice.

### Note

Remove the batteries if the device is not used for an extended period of time.



### WARNING

Do not operate the device if you do not have the correct knowledge. Formal qualifications and/or national legislation for the electrical inspections can apply. Incorrect operation of the device can cause damage, shock, injury or death to persons.



### WARNING

Do not start the measuring procedure before you have set the function switch to the correct position. This can cause damage to the instrument and can cause injury to persons.



### WARNING

Do not change to current or resistance when you measure the voltage. This can cause damage to the instrument and can cause injury to persons.



## 2 Safety information

---



### **WARNING**

Do not measure the current on a circuit when the voltage increases to more than 1000 V. This can cause damage to the instrument and can cause injury to persons.



### **WARNING**

You must disconnect the test leads from the circuit that you did a test on before you change the range. If you do not do this, damage to the instrument and injury to persons can occur.



### **WARNING**

Do not replace the batteries before you remove the test leads. This can cause damage to the instrument and can cause injury to persons.



### **WARNING**

Do not use the device if the test leads and/or the device show signs of damage. Injury to persons can occur.



### **WARNING**

Be careful when you do the measurements if the voltages are more than 25 VAC rms or 35 VDC. There is a risk of shock from these voltages. Injury to persons can occur.



### **WARNING**

Do not do diode, resistance or continuity tests before you have removed the power from the capacitors and from a device during a test. Injury to persons can occur.

## 2 Safety information



### **WARNING**

Do not use the device as a tool to identify live terminals. You must use the correct tools. Injury to persons can occur if you do not use the correct tools.



### **WARNING**

Make sure that children cannot touch the device. The device contains dangerous objects and small parts that children can swallow. If a child swallows an object or a part, speak with a physician immediately. Injury to persons can occur.



### **WARNING**

Do not let children play with the batteries and/or the packing material. These can be dangerous for children if they use them as toys.



### **WARNING**

Do not touch expired or damaged batteries without gloves. Injury to persons can occur.



### **WARNING**

Do not cause a short-circuit of the batteries. This can cause damage to the instrument and can cause injury to persons.



### **WARNING**

Do not put the batteries into a fire. Injury to persons can occur.






### **CAUTION**

Do not use the device for a procedure that it is not made for. This can cause damage to the protection.

## 2 Safety information

---

	This symbol, adjacent to another symbol or terminal, indicates that the user must refer to the manual for further information.
	This symbol, adjacent to a terminal, indicates that, under normal use, hazardous voltages may be present.
	Double insulation.

## 3 Introduction

---

Thank you for choosing a FLIR CM83 clamp meter.

This device is shipped fully tested and calibrated and, with proper use, will provide years of reliable service.


### 3.1 Key features

- 10 000-count digital display.
- Large-scale display.
- Analog bar graph.
- True RMS reading in AC and AC+DC mode.
- Work light.
- Auto AC/DC 600 A capability and selection.
- Auto AC/DC 1000 V capability and selection.
- Auto resistance/continuity/diode selection.
- Power and power factor measurement.
- Total harmonic distortion and 1 to 25 harmonics.
- Phase rotation Indication.
- 100 k $\Omega$  resistance capability.
- VoltSense (non-contact voltage).
- Frequency measurement.
- Capacitance capability.
- Smart data hold.
- Peak hold.
- In-rush current.
- DCA zero key.
- Minimum/maximum and average hold.
- Low-pass filter.
- Auto power off.
- Up to 37 mm diameter (1000 MCM) conductor.
- Maximum bus bar size is 48.5 mm  $\times$  18 mm.
- 1.2 m (4') drop-proof.
- Convenient battery cover.
- CAT. IV 600 V /CAT. III 1000 V standard.

# 4 Description

---

## 4.1 Meter parts

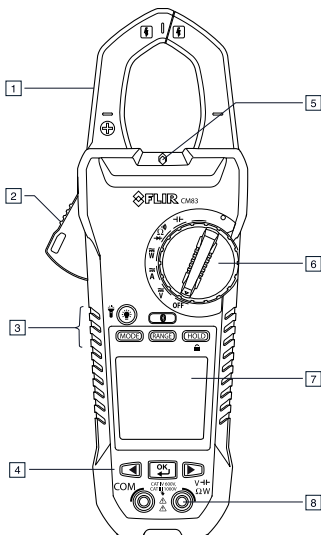


**Figure 4.1** Front view

1. Clamp jaw.
2. Jaw opening trigger.
3. Function buttons, see section 4.3 *Function buttons*, page 9.
4. Navigation buttons.
5. VoltSense light
6. Function switch, see section 4.2 *Function switch*, page 8.
7. LCD display.
8. Probe terminals.

## 4 Description

---

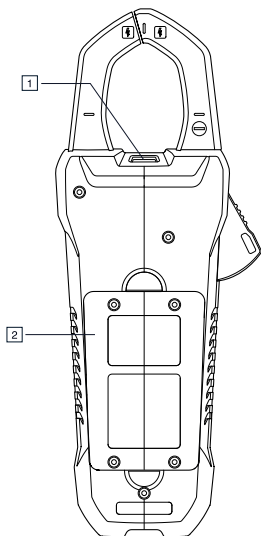

**Figure 4.2** Rear view


1. Work light.
2. Battery compartment.

### 4.2 Function switch

 

 


	The meter can measure capacitance through the probe inputs.
	The meter can measure resistance, continuity, or diode polarity through the probe inputs. The type of measurement is selected by the <b>MODE</b> button.
	The meter can measure power through the probe inputs and the clamp jaws.
	The meter can measure current through the clamp jaws.

## 4 Description

---

	The meter can measure voltage through the probe inputs.
OFF	The meter is in full power-saving mode.

### 4.3 Function buttons

	<ul style="list-style-type: none"><li>Use the button to select Auto select or Manual select mode, see section 5.2 <i>Auto/Manual select mode</i>, page 13.</li><li>In Manual select mode, press the button to select the operating mode.</li></ul>
	<ul style="list-style-type: none"><li>Use the button to select Auto range or Manual range mode, see section 5.3 <i>Auto/Manual range mode</i>, page 14.</li><li>In Manual range mode, press the button to change the range (scale).</li></ul>
	<p>Press the button to toggle between Normal and Hold modes, see section 5.4 <i>Hold mode</i>, page 14.</p> <p>Holding the button down for 2 seconds enables/disables the key lock mode.</p> <p>In Hold mode, the meter will beep continuously and the display will flash if the measured signal is larger than the display reading (for the V.A.W. function).</p>
	<ul style="list-style-type: none"><li>Press the button to enable/disable the display backlight.</li><li>Press and hold the button for 2 seconds to enable/disable the work light.</li></ul>
	Press the button to enable/disable MeterLink (Bluetooth) communication, see section 5.13 <i>Streaming measurement data using Bluetooth</i> , page 26.

## 4 Description

### 4.4 Display icons and indicators












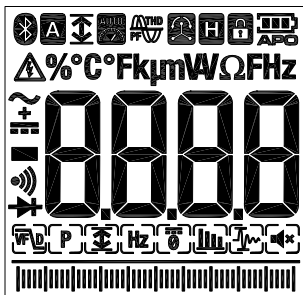














 




Figure 4.3 Display

	Indicates that MeterLink (Bluetooth) communication is active, see section 5.2 <i>Auto/Manual select mode</i> , page 13.
	Indicates that the meter is in Auto select mode.
	Indicates that the meter is displaying maximum reading values.
	Indicates that the meter is displaying minimum reading values.
	Indicates that the meter is displaying the average reading.
	Indicates that the meter is displaying peak maximum values.
	Indicates that the meter is displaying peak minimum values.
	Indicates that the meter is in Auto range mode.
	Indicates that the meter is in Power factor mode.
	Indicates that the meter displays the total harmonic distortion.



## 4 Description

	Indicates that the meter is in Phase rotation mode.
	Indicates that the meter is in Hold mode.
	Indicates the battery voltage status.
<b>APO</b>	Indicates that the auto power off function is enabled.
	Indicates that the measured voltage is greater than 30 V DC or AC RMS.
	Indicates that the meter is measuring AC current or voltage.
	Indicates that the meter is measuring DC current or voltage.
	Indicates that the meter is measuring AC+DC current or voltage.
	Indicates that the continuity function is active.
	Indicates that the diode test function is active.
	VFD mode icon.
	Peak mode icon.
	Min/Max/Avg mode icon.
	DC Zero mode icon.
	Harmonic Distortion icon.
	In-rush current mode icon.
	Frequency mode icon.
	Silent mode icon.
	Lock mode icon.

## 4 Description

---

### 4.4.1 *Out-of-range warning*

If the input is out-of-range, *OL* is displayed.

## 5 Operation

---

### Note

Before operating the device, you must read, understand, and follow all instructions, dangers, warnings, cautions, and notes.


### Note

When the meter is not in use, the function switch should be set to the **OFF** position.

### Note

When connecting the probe leads to the device under test, connect the negative lead before connecting the positive lead. When removing the probe leads, remove the positive lead before removing the negative lead.

### 5.1 Powering the meter

1. Set the function switch to any position to switch on the meter.
2. If the battery indicator  shows that the battery voltage is low or if the meter does not power on, replace the battery. See section 6.2 *Battery replacement*, page 28.

#### 5.1.1 Auto power off

The meter enters sleep mode after 30 minutes of inactivity. The meter beeps three times 9 seconds before powering off. Press any button or turn the function switch to prevent the meter from powering off. The auto power off time-out is then reset.


To disable auto power off (APO); press the MODE button while turning meter on the meter.


 
 

### 5.2 Auto/Manual select mode

In Auto select mode, the meter attempts to automatically select the proper operating mode (e.g., AC or DC measurement) based on the input signal. In Manual select mode, the desired operating mode is selected manually.

## 5 Operation


---





Auto select mode is the default mode of operation. When a new function is selected with the function switch, the starting mode is Auto select and the  indicator is displayed.

- To enter Manual select mode, press the  button. To manually select the operating mode, press the  button repeatedly.
- To enter Auto select mode, press and hold the  button until the  indicator is displayed.

### 5.3 Auto/Manual range mode



In Auto range mode, the meter automatically selects the most appropriate measurement scale. In Manual range mode, the desired range (scale) is set manually.

Auto range mode is the default mode of operation. When a new function is selected with the function switch, the starting mode is Auto range and the  indicator is displayed.

- To enter Manual range mode, press the  button. To change the range, press the  button repeatedly until the desired range is displayed.
- To enter Auto range mode, press and hold the  button until the  indicator is displayed.

### 5.4 Hold mode

In Hold mode, the display freezes the last reading and continues to display this value.

Press the  button to toggle between Normal and Hold modes. In Hold mode, the  indicator is displayed.

#### 5.4.1 Smart hold


The meter will beep continuously and the display will flash if the measured signal is larger than the display reading (for the V.A.W. function).

### 5.5 Silent mode

In Silent mode, the alert beeper is disabled. Silent mode does not affect the continuity beeper.

## 5 Operation


---

1. Use the navigation buttons to select the Silent mode icon , see section 5.6.3.1 *Selecting the mode*, page 16.

### 5.6 Voltage and current measurements

#### 5.6.1 Basic voltage measurements

##### Note

If the measured voltage is greater than 30 V DC or AC RMS, the  indicator is displayed.

1. Set the function switch to the  $\overline{V}$  position.
2. To manually select AC, DC, or AC+DC measurement, press the **MODE** button repeatedly. Refer to section 5.2 *Auto/Manual select mode*, page 13.
3. To manually select the measurement range (scale), press the **RANGE** button repeatedly. Refer to section 5.3 *Auto/Manual range mode*, page 14.
4. Insert the black probe lead into the negative COM terminal and the red probe lead into the positive V terminal.
5. Connect the probe leads in parallel to the part under test.
6. Read the voltage value on the display.

#### 5.6.2 Basic current measurements




##### WARNING

Do not measure the current on a circuit when the voltage increases to more than 1000 V. This can cause damage to the instrument and can cause injury to persons.

When measuring current using the clamp jaws, only one conductor should be enclosed by the jaws—refer to Figure 5.1.

## 5 Operation

---

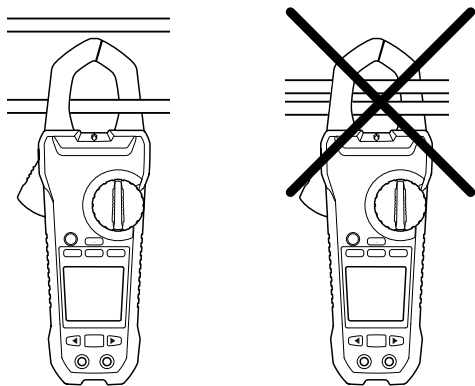

**Figure 5.1** Correct and incorrect setup

1. Ensure that the probe leads are disconnected from the meter.
2. Set the function switch to the  $\bar{A}$  position.
3. To manually select AC, DC, or AC+DC measurement, press the **MODE** button repeatedly. Refer to section 5.2 *Auto/Manual select mode*, page 13.
4. To manually select the measurement range (scale), press the **RANGE** button repeatedly. Refer to section 5.3 *Auto/Manual range mode*, page 14.
5. Press the trigger to open the clamp jaws. Fully enclose one conductor—refer to Figure 5.1. For optimum results, center the conductor in the jaws.
6. Read the current value on the display.

### 5.6.3 Extended functionality

In addition to the basic voltage and current measurements, the meter can be set to different modes for extended functionality.

#### 5.6.3.1 Selecting the mode




The mode icons applicable for the selected measurement type are displayed in the lower part of the display. When a mode is enabled, the icon is framed.

## 5 Operation





 


**Figure 5.2** Mode icons (AC voltage measurements): Peak mode and Silent mode are enabled

The navigation buttons are used to select a mode icon and to enable/disable a mode:

- Use the  and  navigation buttons to navigate to a mode icon. The currently selected icon will flash.
- Press the  button to enable/disable the selected (flashing) mode.

### 5.6.3.2 Peak mode

In Peak mode, the meter captures and displays the positive and negative peak values, and updates only when a higher/lower value is registered. Peak mode is available when measuring AC current or voltage in Manual select mode.

1. Use the navigation buttons to select  and enable Peak mode.
2. Press the  button to toggle between the display of Peak Max and Peak Min.
  - In Peak Max mode, the  indicator is displayed.
  - In Peak Min mode, the  indicator is displayed.
3. Press and hold the  button for 2 seconds to disable Peak mode.

### 5.6.3.3 In-rush current mode

In In-rush current mode, the meter displays the highest current reading in the first 100 ms after the trigger point. In-rush current mode is available when measuring AC current in Manual select mode.

1. Use the navigation buttons to select  and enable In-rush current mode.

#### Note


If the in-rush current under testing may be more than 100 A AC, manually set the range to 600 A before activating the in-rush current, see section 5.3 *Auto/Manual range mode*, page 14.

## 5 Operation

---

### 5.6.3.4 DC Zero mode

The DC zero feature removes offset values and improves the accuracy for DC current measurements. DC Zero mode is available when measuring DC or AC +DC current in Manual select mode.

1. Ensure that there is no conductor in the clamp jaws.
2. Use the navigation buttons to select  and enable DC Zero mode.


 




### 5.6.3.5 Frequency mode

In Frequency mode, the meter measures and displays the frequency. Frequency mode is available when measuring AC current or voltage in Manual select mode.

1. Use the navigation buttons to select  and enable Frequency mode.

### 5.6.3.6 Min/Max/Avg mode

In Min/Max/Avg mode, the meter captures and displays the minimum or maximum values and updates only when a higher/lower value is registered. The meter can also display the average of all values recorded from the beginning of Min/Max/Avg mode.

1. Use the navigation buttons to select  and enable Min/Max/Avg mode.
2. Press the  button repeatedly to cycle through the minimum, maximum, and average reading displays. The corresponding icons are displayed: , , or .
3. Press and hold the  button for 2 seconds to disable Min/Max/Avg mode.

### 5.6.3.7 Harmonic Distortion mode

In Harmonic Distortion mode, the meter displays the distortion percentage value for the first 25 harmonics as well as the total harmonic distortion. Harmonic Distortion mode is available when measuring AC current or voltage in Manual select mode.






The harmonic distortion is expressed as  $H_n = (\text{RMS of an individual harmonic } n) / (\text{RMS of the fundamentals}) \times 100\%$ .

1. Use the navigation buttons to select  and enable Harmonic Distortion mode.




## 5 Operation

---

2. While in Harmonic Distortion mode, use the  and  navigation buttons to navigate through the individual and total harmonic data. H01, H02, ..., Hn is displayed.
3. When the total harmonic distortion is displayed, the  indicator appears in the upper part of the display and 'thd' is shown in the main display.
4. Press the  button to switch the display between Harmonic Order Indication mode and Percentage mode.
5. Press and hold the  button for 2 seconds to disable Harmonic Distortion mode.

### 5.6.3.8 VFD mode

In VFD mode, high-frequency noise is eliminated from the voltage measurement by a low-pass filter. VFD mode is intended for measurements on variable-frequency drives (VFDs). VFD mode is available when measuring AC current or voltage in Manual select mode.

1. Use the navigation buttons to select  and enable VFD mode.

## 5.7 VoltSense (non-contact voltage)

### Note

Test on a known live circuit before testing on an unfamiliar circuit.

1. Hold the clamp tips of the meter very close to the voltage source.
2. If voltage is present, the non-contact voltage alert lamp (see section 4.1 *Meter parts*, page 7) illuminates a red color.




### CAUTION

If the non-contact voltage alert lamp is not illuminated, voltage could still be present.

## 5.8 Power measurements

### 5.8.1 Single-phase power measurements

1. Set the function switch to the  position.




## 5 Operation

---

2. Insert the black probe lead into the negative COM terminal and the red probe lead into the positive W terminal.
3. Press the trigger to open the clamp jaws. Fully enclose one conductor—refer to Figure 5.1. For optimum results, center the conductor in the jaws.

### Note

The + symbol on the jaw should be directed toward the power source.

4. Connect the probe leads in parallel to the part under test.
5. Read the active power value on the display.
  - If the value is displayed without a sign, the power is flowing from the power source to the load.
  - If the value is displayed with a minus sign (-), the power is flowing from the power load to the source.
6. To measure and display the power factor, press the **MODE** button repeatedly until the  indicator is displayed.
7. Read the power factor value on the display.
  - If the value is displayed without a sign, the phase of the current signal is lagging behind the voltage signal (inductive load).
  - If the value is displayed with a minus sign (-), the phase of the current signal is leading the voltage signal (capacitive load).
8. To return to active power measurements, press the **MODE** button repeatedly until neither the  nor the  indicator is displayed.


If an overload occurs, the following is displayed:

- *OL. V*: Voltage overload or both voltage and current overload.
- *OL. A*: Current overload.
- *OL. kW*: Active power overload.

### 5.8.2 Three-phase power measurements

#### 5.8.2.1 Three-phase three-wire balanced/unbalanced

The power of a three-phase three-wire wye (star) configuration is measured in two steps, in accordance with Figure 5.3. The total power is the sum of the two measurements:  $W = W_1 + W_2$ .

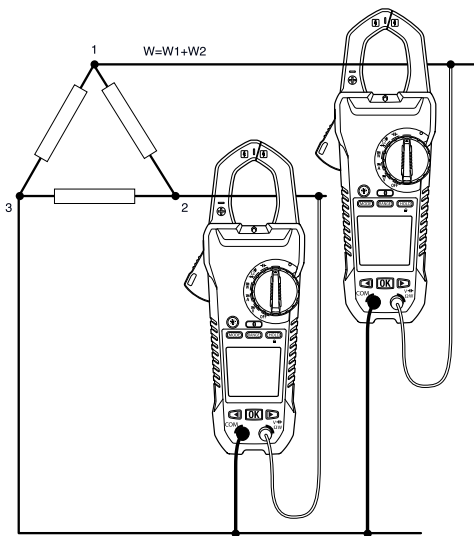


**Figure 5.3** Three-phase three-wire measurement

1. Set the function switch to the  $\overline{W}$  position.
2. Ensure that the meter is set to active power measurement. If the  $\overline{A}$  or the  $\overline{V}$  indicator is displayed, press the **MODE** button repeatedly until none of these indicators are displayed.
3. Take two measurements of the active power, in accordance with Figure 5.3.


 
### 5.8.2.2 Three-phase four-wire balanced/unbalanced

The power of a three-phase four-wire configuration is measured in three steps, accordance with Figure 5.4. The total power is the sum of the three measurements:  $W = W_1 + W_2 + W_3$ .

## 5 Operation

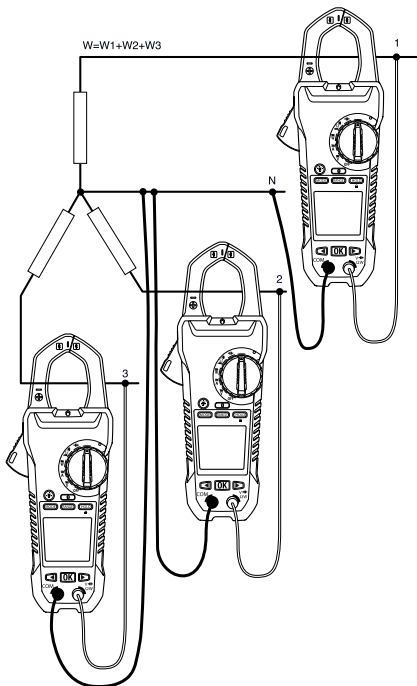

**Figure 5.4** Three-phase four-wire measurement

1. Set the function switch to the  $\bar{W}$  position.
2. Ensure that the meter is set to active power measurement. If the  or the  indicator is displayed, press the **MODE** button repeatedly until none of these indicators are displayed.
3. Take three measurements of the active power, in accordance with Figure 5.4.


## 5 Operation

### 5.8.3 Phase rotation


With the meter set to Phase rotation mode, it is possible to determine the phase rotation for a three-wire system.

#### Note

The system frequency must be stable.

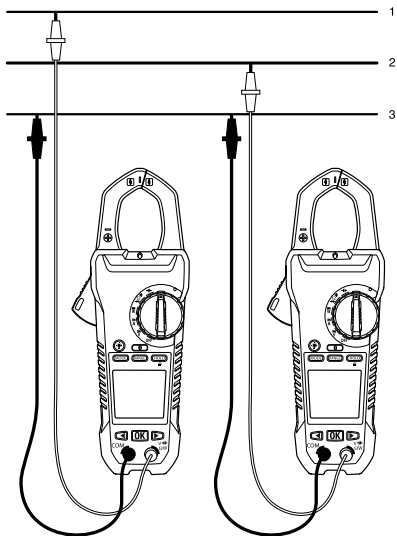

**Figure 5.5** Phase rotation

1. Set the function switch to the  $\overline{W}$  position.
2. Enter Phase rotation mode by pressing the **MODE** button repeatedly until the  indicator is displayed.
3. Connect the red test lead to the presumed phase line 1 and the black test lead to the presumed phase line 3.

## 5 Operation

---

- One of the following results is displayed:
  - OL V* flashes if the voltage is  $>1000$  V.
  - Lo V* flashes if the voltage is  $<30$  V.
  - outF* flashes if the frequency is  $>65$  Hz or  $<45$  Hz.
  - If normal, *L1* flashes for about 3 seconds. Then *L2* is displayed and the meter beeps twice.
- Move the red test lead to the presumed phase line 2.
- One of the following results is displayed:
  - 123* indicates clockwise or forward rotation, which means that the presumed phase line 1 is ahead of the presumed phase line 2.
  - 321* indicates counterclockwise or reversed rotation, which means that the presumed phase line 2 is ahead of the presumed phase line 1.
  - - -* means that the meter is unable to determine the results.
  - Lo V* means that users possibly removed the test leads before completing the testing procedure. To repeat the test, press the OK button again.

### 5.9 Resistance measurements



#### WARNING

Do not do diode, resistance or continuity tests before you have removed the power from the capacitors and from a device during a test. Injury to persons can occur.

- Set the function switch to the  $\Omega$  position.
- Ensure that the meter is set to resistance measurement. If the or the indicator is displayed, press the **MODE** button repeatedly until none of these indicators are displayed.
- Insert the black probe lead into the negative COM terminal and the red probe lead into the positive  $\Omega$  terminal.
- Touch the tips of the probe across the circuit or component under test.
- Read the resistance value on the display.

## 5 Operation

---

### 5.10 Capacitance measurements



#### WARNING

Do not do diode, resistance or continuity tests before you have removed the power from the capacitors and from a device during a test. Injury to persons can occur.

#### Note

To protect the internal components, if a capacitor that is being tested has a charge, the meter will first discharge the cap and show *diSC*. After a complete discharge the meter will conduct a normal test. *diSC* may also be displayed if the incorrect input is provided (e.g., measuring voltage while in capacitance mode).

1. Set the function switch to the  $\text{--}\text{||}\text{--}$  position.
2. Insert the black probe lead into the negative COM terminal and the red probe lead into the positive  $\text{--}\text{||}\text{--}$  terminal.
3. Touch the tips of the probe across the part under test.
4. Read the capacitance value on the display.

#### Note

For very large capacitance values, it may take several seconds for the measurement to settle and the final reading to stabilize.

### 5.11 Continuity test




#### WARNING

Do not do diode, resistance or continuity tests before you have removed the power from the capacitors and from a device during a test. Injury to persons can occur.

1. Set the function switch to the  $\text{---}\text{||}\text{---}$  position.
2. Insert the black probe lead into the negative COM terminal and the red probe lead into the positive  $\Omega$  terminal.

## 5 Operation

---


 
3. Use the **MODE** button to select continuity measurement. The  indicator will be displayed.
4. Touch the tips of the probe across the circuit or component under test.
5. If the resistance is less than 30  $\Omega$ , the meter will beep.

### 5.12 Diode test



#### **WARNING**

Do not do diode, resistance or continuity tests before you have removed the power from the capacitors and from a device during a test. Injury to persons can occur.

1. Set the function switch to the  position.
2. Insert the black probe lead into the negative COM terminal and the red probe lead into the positive  $\Omega$  terminal.
3. Use the **MODE** button to select the diode test function. The  indicator will be displayed.
4. Touch the tips of the probe across the diode or semiconductor junction under test.
5. If the diode conducts at forward bias and opens at reverse bias, the meter displays the forward voltage (positive reading).
6. If the diode opens at forward bias and conducts at reverse bias, the meter displays the reverse voltage (negative reading).
7. If the diode conducts at both forward and reverse bias, the meter displays *bAd*.
8. If the reading is between 0.40 V and 0.80 V or between -0.40V and -0.80V, the component is good.

### 5.13 Streaming measurement data using Bluetooth

#### 5.13.1 General

Some IR cameras from FLIR Systems support Bluetooth communication, and to those cameras you can stream measurement data from the meter. The data is then merged into the result table in the IR image.


Streaming measurement data is a convenient way to add important information to an IR image. For example, when identifying an overheated cable connection, you may want to know the current in that cable.



## 5 Operation

---

### 5.13.2 Procedure

1. Pair the IR camera with the instrument. Refer to the camera manual for information on how to pair Bluetooth devices.
2. Turn on the camera.
3. Turn on the meter.
4. Press the  on the meter to enable Bluetooth.
5. Choose the variable that you want to use (voltage, current, resistance, etc.). Results from the meter will now automatically be displayed in the result table in the top left corner of the IR camera screen.

## 6 Maintenance

---

### 6.1 Cleaning and storage

Clean the meter with a damp cloth and mild detergent; do not use abrasives or solvents.

If the meter is not to be used for an extended period, remove the batteries and store them separately.

### 6.2 Battery replacement

1. To avoid electrical shock, disconnect the meter if connected to a circuit, remove the probe/thermocouple leads from the terminals, and set the function switch to the **OFF** position before attempting to replace the batteries.
2. Unscrew and remove the battery compartment cover.
3. Replace the six standard AAA batteries, observing correct polarity.
4. Secure the battery compartment cover.

#### 6.2.1 Disposal of electronic waste



As with most electronic products, this equipment must be disposed of in an environmentally friendly way, and in accordance with existing regulations for electronic waste.

Please contact your FLIR Systems representative for more details.

# 7 Technical specifications

---



## 7.1 General specifications

Display count: 10 000 or 4000.

Measuring rate: 3 times per second.

Over-range indication: *OL* or *-OL*.

Auto power off: Approx. 30 minutes.

Low battery indicator:  is displayed. Replace the battery when the indicator  appears in the display.

Power requirement: 6 × 1.5 V AAA alkaline batteries.

Battery life: Approx. 50 hours with alkaline batteries (backlight, work light, and Bluetooth are off).

Environmental conditions: Indoor use.

Calibration: 1 year calibration cycle.

Operating temperatures:

- 0 to 10°C (non-condensing)
- 10 to 30°C (≤ 80% RH)
- 30 to 40°C (≤ 75% RH)
- 40 to 50°C (≤ 45%RH)

Storage temperature:

- -20 to 60°C.
- 0–80% RH (batteries not fitted).

Dimensions (H × W × L): 49 mm × 100 mm × 262 mm (1.9" × 3.9" × 10.3").

Weight: 0.59 kg (1.29 lb.), including batteries.

Temperature coefficient: 0.2 × (specified accuracy)/°C, <18°C, >28°C.

Over-voltage category: IEC 61010-1 CAT.IV 600V CAT. III 1000V, IEC 61010-2-030, IEC 61010-2-033.

## 7 Technical specifications

CAT	Application field
I	Circuits not connected to mains
II	Circuits directly connected to a low-voltage installation
III	Building installation
IV	Source of the low-voltage installation

Operating altitude: 2000 m (6562').

Conductor size: 37 mm diameter.

Pollution degree: 2.

EMC: EN 61326-1.

Shock vibration: Random vibration per MIL-PRF-28800f Class 2 (5–55 Hz, 3g maximum).

Drop protection: 1.2 m (4') onto hardwood on a concrete floor.

### 7.2 Electrical specifications

Accuracy is  $\pm$ (% reading + number of digits (dgt)) at  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ , <80% RH.

**Table 7.1** Voltage

Function	Range	Accuracy <sup>1</sup>
DCV	99.99 V	$\pm(0.7\% + 2 \text{ dgt})$
	999.9 V	
ACV	0.05–99.99 V	$\pm(1.0\% + 5 \text{ dgt})$
	999.9 V	50–500 Hz
VFD	0.05–99.99 V	50–60 Hz $\pm(1\% + 5 \text{ dgt})$
ACV	999.9 V	

1. DCV <1000 dgt, add 6 dgt to the accuracy. ACV <1000 dgt, add 3 dgt to the accuracy.

Overload protection: 1000  $V_{\text{rms}}$ .

Input impedance: 3.5 M $\Omega$  //, <100 pF.

## 7 Technical specifications

---

AC conversion type: AC coupled, true RMS responding, calibrated to the RMS value of a sine wave input. Accuracies are given for sine waves at full scale and non-sine waves below half scale. For non-sine waves (50/60 Hz), add the following crest factor corrections:

- For a crest factor of 1.4–2.0, add 1.0% to the accuracy.
- For a crest factor of 2.0–2.5, add 2.5% to the accuracy.
- For a crest factor of 2.5–3.0, add 4.0% to the accuracy.

CF:

- 3 @ 460 V, 280 A.
- 2 @ 690 V, 420 A.

AC+DC  $V_{rms}$  accuracy: Same as ACV specification + DCV specification.

**Table 7.2** Current

Function	Range	Accuracy
DCA	99.99 A	$\pm(1.5\% + 0.2 \text{ A})$
	599.9 A	$\pm(1.5\% + 5 \text{ dgt})^*$
ACA	0.10–99.99 A	50–60 Hz $\pm(1.5\% + 5 \text{ dgt})^*$
	599.9 A	>60–400 Hz $\pm(2\% + 5 \text{ dgt})^*$
VFD ACA	0.10–99.99 A	50–60 Hz $\pm(1.5\% + 5 \text{ dgt})^*$
	599.9 A	

\* The measured value <1000 dgt, add 5 dgt to the accuracy.

Overload protection: 600  $A_{rms}$ .

Position error:  $\pm 1\%$  of reading.

AC conversion type and additional accuracy is same as for the AC voltage.

AC+DC  $A_{rms}$  accuracy: Same as ACA specification + DCA specification. The DCA is affected by the temperature and the residual magnetism. Use the DCA zero function to compensate.

## 7 Technical specifications

**Table 7.3** Peak hold: peak maximum/peak minimum

Function	Range	Accuracy
ACV	140.0 V	$\pm(3.0\% + 15 \text{ dgt})$
	1400 V	
ACA	140.0 A	$\pm(3.0\% + 15 \text{ dgt})$
	850 A	

Overload protection: 1000  $V_{\text{rms}}$ , 600  $A_{\text{rms}}$

Accuracy defined for sine waves,  $ACV > 5 V_{\text{rms}}/ACA \geq 5 A_{\text{rms}}$ , frequency 50–400 Hz. Only suitable for repetitive events.

**Table 7.4** Frequency

Function	Range	Accuracy
Frequency	20.00–99.99 Hz	$\pm(0.5\% + 3 \text{ dgt})$
	20.0–999.9 Hz	
	0.020–9.999 kHz	

Overload protection: 1000  $V_{\text{rms}}$ , 600  $A_{\text{rms}}$ .

Sensitivity:

- 10–100  $V_{\text{rms}}$  for AC 100 V range.
- 10–100  $A_{\text{rms}}$  for AC 100 A range (>400 Hz unspecified).
- 100–1000  $V_{\text{rms}}$  for AC 1000 V range.
- 100–600  $A_{\text{rms}}$  for AC 600 A range (>400 Hz unspecified).

The reading will be 0.0 for signals below 10.0 Hz.

**Table 7.5** Total harmonic distortion

Function	Range	Accuracy
ACA/ACV	99.9%	$\pm(3.0\% + 10 \text{ dgt})$

## 7 Technical specifications

**Table 7.6** Harmonic distortion measurement

Harmonic order	Range	Accuracy
H01–H12	99.9%	$\pm(5\% + 10 \text{ dgt})$
H13–H25		$\pm(10\% + 10 \text{ dgt})$

Overload protection: 1000 V<sub>rms</sub>, 600 A<sub>rms</sub>

- If ACV < 10 V<sub>rms</sub> or ACA < 10 A<sub>rms</sub>, *rdy* is displayed.
- If the fundamental frequency is outside the range 45–65Hz, *out.F* is displayed.

**Table 7.7** Inrush current

Function	Range	Accuracy
ACA	99.99 A	$\pm(2.5\% + 0.2 \text{ A})$
	599.9 A	$\pm(2.5\% + 5 \text{ dgt})$

Overload protection: 1000 V<sub>rms</sub>, 600 A<sub>rms</sub>.

Accuracy is defined for sine waves, ACA  $\geq$  10 A<sub>rms</sub>, rreq. 50/60 Hz. Integration time approx. 100 ms.

**Table 7.8** Active power: watts (DC/AC)

Function	Range <sup>1</sup>	Accuracy
DCW	9.999 kW	$\pm(2.5\% + 20 \text{ dgt})$
	99.99 kW	
	599.9 kW	$\pm(2.5\% + 10 \text{ dgt})$
ACW	9.999 kW	$\pm(2.5\% + 10 \text{ dgt})$
	99.99 kW	
	599.9 kW	

1. The range is determined by the V/A range (9.999 kW: 100 V, 100 A; 99.99 kW: 1000 V, 100 A, or 100 V, 600 A; 599.9 kW: 1000 V, 600 A).

Overload protection: 1000 V<sub>rms</sub>, 600 A<sub>rms</sub>.

## 7 Technical specifications

---

Accuracy defined for:

- ACW:
  - Sine waves,  $ACV \geq 10 V_{rms}$ ,  $ACA \geq 5 A_{rms}$ .
  - Frequency 50–60 Hz, PF = 1.00.
- DCW:  $DCV \geq 10 V$ ,  $DCA \geq 5 A$ .

**Table 7.9** Power factor

Function	Range	Accuracy
PF	-1.00 to 0.00 to +1.00	$\pm 3^\circ \pm 1 \text{ dgt}$

Overload protection:  $1000 V_{rms}$ ,  $600 A_{rms}$ .

**Table 7.10** Resistance and continuity and diode

Function	Range	Accuracy
Resistance	999.9 $\Omega$	$\pm(1.0\% + 5 \text{ dgt})$
	9.999 k $\Omega$	$\pm(1.0\% + 3 \text{ dgt})$
	99.99 k $\Omega$	
Continuity	999.9 $\Omega$	$\pm(1.0\% + 5 \text{ dgt})$
Diode	0.40–0.80 V	$\pm 0.1V$

Overload protection:  $1000 V_{rms}$ .

Maximum test current: Approx. 0.5 mA.

Maximum open circuit voltage for  $\Omega$ : Approx. 2.4 V.

Maximum open circuit voltage for diode: Approx.  $\pm 1.6 V$ .

Continuity threshold:

- $< 30 \Omega$  beep on.
- $> 100 \Omega$  beep off.

Continuity indicator: 2 kHz tone buzzer.

Continuity response time:  $< 100 \text{ ms}$ .



## 7 Technical specifications

---

**Table 7.11** Capacitance

Function	Range	Accuracy
Capacitance	3.999 $\mu$ F	$\pm(1.9\% + 8 \text{ dgt})$
	39.99 $\mu$ F	
	399.9 $\mu$ F	
	3.999 mF	

Overload protection: 1000  $V_{\text{rms}}$ .

# 8 Warranties

---

## 8.1 FLIR Global Limited Lifetime Warranty

A qualifying FLIR Test and Measurement product (the "Product") purchased either directly from FLIR Commercial Systems Inc and affiliates (FLIR) or from an authorized FLIR distributor or reseller that Purchaser registers on-line with FLIR is eligible for coverage under FLIR's Limited Lifetime Warranty, subject to the terms and conditions in this document. This warranty only applies to purchases of Qualifying Products (see below) purchased and manufactured after April 1, 2013.

PLEASE READ THIS DOCUMENT CAREFULLY; IT CONTAINS IMPORTANT INFORMATION ABOUT THE PRODUCTS THAT QUALIFY FOR COVERAGE UNDER THE LIMITED LIFETIME WARRANTY, PURCHASER'S OBLIGATIONS, HOW TO ACTIVATE THE WARRANTY, WARRANTY COVERAGE, AND OTHER IMPORTANT TERMS, CONDITIONS, EXCLUSIONS AND DISCLAIMERS.

**1. PRODUCT REGISTRATION.** To qualify for FLIR's Limited Lifetime Warranty, Purchaser must fully register the Product directly with FLIR on-line at <http://www.flir.com> within Sixty (60) DAYS of the date the Product was purchased by the first retail customer (the "Purchase Date"). Qualifying PRODUCTS THAT ARE NOT REGISTERED ON-LINE WITHIN SIXTY (60) DAYS OF THE PURCHASE DATE WILL HAVE A LIMITED ONE YEAR WARRANTY FROM DATE OF PURCHASE.

**2. QUALIFYING PRODUCTS.** Upon registration, Test and Measurement products that qualify for coverage under FLIR's Limited Lifetime Warranty are: MR7x, CM7x, CM8x, DMxx, VP5x not including accessories which may have their own warranty.

**3. WARRANTY PERIODS.** For purposes of the The Limited Lifetime Warranty, Lifetime is defined as seven years (7) after the product is no longer manufactured, or ten years (10) from date of purchase, whichever is greater. This Warranty is only applicable to the original owner of the Products.

Any Product that is repaired or replaced under warranty is covered under this Limited Lifetime Warranty for one hundred eighty days (180) days from the date of return shipment by FLIR or for the remaining duration of the applicable Warranty Period, whichever is longer.

**4. LIMITED WARRANTY.** In accordance with the terms and conditions of this Limited Lifetime Warranty, and except as excluded or disclaimed in this document, FLIR warrants, from the Purchase Date, that all fully registered Products will conform to FLIR's published Product specifications and be free from defects in materials and workmanship during the applicable Warranty Period. PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY, AT FLIR'S SOLE DISCRETION, IS THE REPAIR OR REPLACEMENT OF

DEFECTIVE PRODUCTS IN A MANNER, AND BY A SERVICE CENTER, AUTHORIZED BY FLIR. IF THIS REMEDY IS ADJUDICATED TO BE INSUFFICIENT, FLIR SHALL REFUND PURCHASER'S PAID PURCHASE PRICE AND HAVE NO OTHER OBLIGATION OR LIABILITY TO BUYER WHATSOEVER.

**5. WARRANTY EXCLUSIONS AND DISCLAIMERS.** FLIR MAKES NO OTHER WARRANTY OF ANY KIND WITH RESPECT TO THE PRODUCTS. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (EVEN IF PURCHASER HAS NOTIFIED FLIR OF ITS INTENDED USE FOR THE PRODUCTS), AND NON-INFRINGEMENT ARE EXPRESSLY EXCLUDED FROM THIS AGREEMENT.

THIS WARRANTY EXPRESSLY EXCLUDES ROUTINE PRODUCT MAINTENANCE, SOFTWARE UPDATES, AND REPLACEMENT OF MANUALS, FUSES, OR DISPOSABLE BATTERIES. FLIR FURTHER EXPRESSLY DISCLAIMS ANY WARRANTY COVERAGE WHERE THE ALLEGED NONCONFORMITY IS DUE TO NORMAL WEAR AND TEAR, OTHER ALTERATION, MODIFICATION, REPAIR, ATTEMPTED REPAIR, IMPROPER USE, IMPROPER MAINTENANCE, NEGLIGENCE, ABUSE, IMPROPER STORAGE, FAILURE TO FOLLOW ANY PRODUCT INSTRUCTIONS, DAMAGE (WHETHER CAUSED BY ACCIDENT OR OTHERWISE), OR ANY OTHER IMPROPER CARE OR HANDLING OF THE PRODUCTS CAUSED BY ANYONE OTHER THAN FLIR OR FLIR'S EXPRESSLY AUTHORIZED DESIGNEE.

THIS DOCUMENT CONTAINS THE ENTIRE WARRANTY AGREEMENT BETWEEN PURCHASER AND FLIR AND SUPERSEDES ALL PRIOR WARRANTY NEGOTIATIONS, AGREEMENTS, PROMISES AND UNDERSTANDINGS BETWEEN PURCHASER AND FLIR. THIS WARRANTY MAY NOT BE ALTERED WITHOUT THE EXPRESS WRITTEN CONSENT OF FLIR.

**6. WARRANTY RETURN, REPAIR AND REPLACEMENT.** To be eligible for warranty repair or replacement, Purchaser must notify FLIR within thirty (30) days of discovering of any apparent defect in materials or workmanship. Before Purchaser may return a Product for warranty service or repair, Purchaser must first obtain a returned material authorization (RMA) number from FLIR. To obtain the RMA number Owner must provide an original proof of purchase. For additional information, to notify FLIR of an apparent defect in materials or workmanship, or to request an RMA number, visit <http://www.flir.com>. Purchaser is solely responsible for complying with all RMA instructions provided by FLIR including but not limited to adequately packaging the Product for shipment to FLIR and for all packaging and shipping costs. FLIR will pay for returning to Purchaser any Product that FLIR repairs or replaces under warranty.

## 8 Warranties

FLIR reserves the right to determine, in its sole discretion, whether a returned Product is covered under Warranty. If FLIR determines that any returned Product is not covered under Warranty or is otherwise excluded from Warranty coverage, FLIR may charge Purchaser a reasonable handling fee and return the Product to Purchaser, at Purchaser's expense, or offer Purchaser the option of handling the Product as a non-warranty return.

**7. NON-WARRANTY RETURN.** Purchaser may request that FLIR evaluate and service or repair a Product not covered under warranty, which FLIR may agree to do in its sole discretion. Before Purchaser returns a Product for non-warranty evaluation and repair, Purchaser must contact FLIR by visiting <http://www.flir.com> to request an evaluation and obtain an RMA. Purchaser is solely responsible for complying with all RMA instructions provided by FLIR including but not limited to adequately packaging the Product for shipment to FLIR and for all packaging and shipping costs. Upon receipt of an authorized non-warranty return, FLIR will evaluate the Product and contact Purchaser regarding the feasibility of and the costs and fees associated with Purchaser's request. Purchaser shall be responsible for the reasonable cost of FLIR's evaluation, for the cost of any repairs or services authorized by Purchaser, and for the cost of repackaging and returning the Product to Purchaser.

Any non-warranty repair of a Product is warranted for one hundred eighty days (180) days from the date of return shipment by FLIR to be free from defects in materials and workmanship only, subject to all of the limitations, exclusions and disclaimers in this document.

### 8.2 FLIR Test and Measurement Limited 2 Year Warranty

A qualifying FLIR Test and Measurement product (the "Product") purchased either directly from FLIR Commercial Systems Inc and affiliates (FLIR) or from an authorized FLIR distributor or reseller that Purchaser registers on-line with FLIR is eligible for coverage under FLIR's Limited Warranty, subject to the terms and conditions in this document. This warranty only applies to purchases of Qualifying Products (see below) purchased and manufactured after April 1, 2013.

PLEASE READ THIS DOCUMENT CAREFULLY; IT CONTAINS IMPORTANT INFORMATION ABOUT THE PRODUCTS THAT QUALIFY FOR COVERAGE UNDER THE LIMITED WARRANTY, PURCHASER'S OBLIGATIONS, HOW TO ACTIVATE THE WARRANTY, WARRANTY COVERAGE, AND OTHER IMPORTANT TERMS, CONDITIONS, EXCLUSIONS AND DISCLAIMERS.

**1. PRODUCT REGISTRATION.** To qualify for FLIR's Limited Warranty, Purchaser must fully register the Product directly with FLIR on-line at <http://www.flir.com> within Sixty (60) DAYS of the date the Product was purchased by the first retail customer (the "Purchase Date"). Qualifying PRODUCTS THAT ARE NOT REGISTERED ON-LINE

WITHIN SIXTY (60) DAYS OF THE PURCHASE DATE WILL HAVE A LIMITED ONE YEAR WARRANTY FROM DATE OF PURCHASE.

**2. QUALIFYING PRODUCTS.** Upon registration, Test and Measurement products that qualify for coverage under FLIR's Limited Warranty are: VS70 Videoscope, VSAxx Articulation Camera, VSCxx Camera, VSSxx Probe Spool, VST handset, MR02 Pin Extension Probe, and TAxX not including accessories which may have their own warranty.

**3. WARRANTY PERIODS.** The applicable Limited Warranty Period measured from the Purchase data are:

Products	Limited Warranty Period
VS70, VSAxx, VSCxx, VSSxx, VST, MR02, TAxX	TWO (2) Years

Any Product that is repaired or replaced under warranty is covered under this Limited Warranty for one hundred eighty days (180) days from the date of return shipment by FLIR or for the remaining duration of the applicable Warranty Period, whichever is longer.

**4. LIMITED WARRANTY.** In accordance with the terms and conditions of this Limited Warranty, and except as excluded or disclaimed in this document, FLIR warrants, from the Purchase Date, that all fully registered Products will conform to FLIR's published product specifications and be free from defects in materials and workmanship during the applicable Warranty Period. PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY, AT FLIR'S SOLE DISCRETION, IS THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS IN A MANNER, AND BY A SERVICE CENTER, AUTHORIZED BY FLIR. IF THIS REMEDY IS ADJUDICATED TO BE INSUFFICIENT, FLIR SHALL REFUND PURCHASER'S PAID PURCHASE PRICE AND HAVE NO OTHER OBLIGATION OR LIABILITY TO BUYER WHATSOEVER.

**5. WARRANTY EXCLUSIONS AND DISCLAIMERS.** FLIR MAKES NO OTHER WARRANTY OF ANY KIND WITH RESPECT TO THE PRODUCTS. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (EVEN IF PURCHASER HAS NOTIFIED FLIR OF ITS INTENDED USE FOR THE PRODUCTS), AND NON-INFRINGEMENT ARE EXPRESSLY EXCLUDED FROM THIS AGREEMENT.

THIS WARRANTY EXPRESSLY EXCLUDES ROUTINE PRODUCT MAINTENANCE, SOFTWARE UPDATES, AND REPLACEMENT OF FUSES, OR DISPOSABLE BATTERIES. FLIR FURTHER EXPRESSLY DISCLAIMS ANY WARRANTY COVERAGE WHERE THE ALLEGED NONCONFORMITY IS DUE TO NORMAL WEAR AND TEAR, OTHER ALTERATION, MODIFICATION, REPAIR, ATTEMPTED REPAIR, IMPROPER USE, IMPROPER

## 8 Warranties

---

MAINTENANCE, NEGLIGENCE, ABUSE, IMPROPER STORAGE, FAILURE TO FOLLOW ANY PRODUCT INSTRUCTIONS, DAMAGE (WHETHER CAUSED BY ACCIDENT OR OTHERWISE), OR ANY OTHER IMPROPER CARE OR HANDLING OF THE PRODUCTS CAUSED BY ANYONE OTHER THAN FLIR OR FLIR'S EXPRESSLY AUTHORIZED DESIGNEE.

THIS DOCUMENT CONTAINS THE ENTIRE WARRANTY AGREEMENT BETWEEN PURCHASER AND FLIR AND SUPERSEDES ALL PRIOR WARRANTY NEGOTIATIONS, AGREEMENTS, PROMISES AND UNDERSTANDINGS BETWEEN PURCHASER AND FLIR. THIS WARRANTY MAY NOT BE ALTERED WITHOUT THE EXPRESS WRITTEN CONSENT OF FLIR.

**6. WARRANTY RETURN, REPAIR AND REPLACEMENT.** To be eligible for warranty repair or replacement, Purchaser must notify FLIR within thirty (30) days of discovering of any apparent defect in materials or workmanship. Before Purchaser may return a Product for warranty service or repair, Purchaser must first obtain a returned material authorization (RMA) number from FLIR. To obtain the RMA number Owner must provide an original proof of purchase. For additional information, to notify FLIR of an apparent defect in materials or workmanship, or to request an RMA number, visit <http://www.flir.com>. Purchaser is solely responsible for complying with all RMA instructions provided by FLIR including but not limited to adequately packaging the Product for shipment to FLIR and for all packaging and shipping costs. FLIR will pay for returning to Purchaser any Product that FLIR repairs or replaces under warranty.

FLIR reserves the right to determine, in its sole discretion, whether a returned Product is covered under Warranty. If FLIR determines that any returned Product is not covered under Warranty or is otherwise excluded from Warranty coverage, FLIR may charge Purchaser a reasonable handling fee and return the Product to Purchaser, at Purchaser's expense, or offer Purchaser the option of handling the Product as a non-warranty return.

**7. NON-WARRANTY RETURN.** Purchaser may request that FLIR evaluate and service or repair a Product not covered under warranty, which FLIR may agree to do in its sole discretion. Before Purchaser returns a Product for non-warranty evaluation and repair, Purchaser must contact FLIR by visiting <http://www.flir.com> to request an evaluation and obtain an RMA. Purchaser is solely responsible for complying with all RMA instructions provided by FLIR including but not limited to adequately packaging the Product for shipment to FLIR and for all packaging and shipping costs. Upon receipt of an authorized non-warranty return, FLIR will evaluate the Product and contact Purchaser regarding the feasibility of and the costs and fees associated with Purchaser's request. Purchaser shall be responsible for the reasonable cost of FLIR's evaluation, for the cost of any repairs or services authorized by Purchaser, and for the cost of repackaging and returning the Product to Purchaser.

Any non-warranty repair of a Product is warranted for one hundred eighty days (180) days from the date of return shipment by FLIR to be free from defects in materials and workmanship only, subject to all of the limitations, exclusions and disclaimers in this document.



---

**A note on the technical production of this publication**

This publication was produced using XML — the eXtensible Markup Language. For more information about XML, please visit <http://www.w3.org/XML/>

**A note on the typeface used in this publication**

This publication was typeset using Linotype Helvetica™ World. Helvetica™ was designed by Max Miedinger (1910–1980)

**LOEF (List Of Effective Files)**

T501025.xml; en-US; 8453; 2013-07-18





---

**Corporate Headquarters**

Flir Systems, Inc.  
27700 SW Parkway Ave.  
Wilsonville, OR 97070  
USA  
Telephone: +1-503-498-3547

**Website**

<http://www.flir.com>

**Customer support**

<http://support.flir.com>

Publ. No.: T559825  
Release: AC  
Commit: 8453  
Head: 8453  
Language: en-US  
Modified: 2013-07-18  
Formatted: 2013-07-18



T559825