

Regular Type

SSR-3

3-Phase Solid State Relay

INSTRUCTION MANUAL

Thank you for purchasing HANYOUNG product.
Please check whether the product is the exactly same as you ordered.
Before using the product, please read this instruction manual carefully.
Please keep this manual where you can view at any time

HANYOUNG nux



HANYOUNG NUX CO., LTD
HEAD OFFICE
28, Gilpa-ro 7beon-gil, Nam-gu, Incheon, Korea
TEL : (82-32)876-4697 FAX : (82-32)876-4696 http://www.hynux.com

Safety information

Before using the product, please read the safety information thoroughly and use it properly.
Alerts declared in the manual are classified to Danger, Warning and Caution by their criticality

| | |
|----------------|--|
| DANGER | DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury |
| WARNING | WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury |
| CAUTION | CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury |

DANGER

Do not touch or contact the input/output terminals because they may cause electric shock.

WARNING

- Before you use, please read safety precautions carefully, and use this product properly.
- If you are concerned about serious accident due to the malfunction of products, please install the external safety equipment
- To prevent deflection or malfunction of this product, supply proper power voltage in accordance with the rating.
- To prevent electric shock or devise malfunction of this product, do not supply the power until the wiring is completed.
- Reassemble this product while the power is off. Otherwise, it may cause malfunction or electric shock.
- If the user uses the product with methods other than specified by the manufacturer, it will bring the bodily injuries or property damages.
- Due to the danger of electric shock, please use this product installed onto a panel while an electric current is applied.

CAUTION


- Before using the product you have purchased, please check out if it is exactly what you ordered.
- Do not use this product at any place with corrosive gas (especially noxious gas or ammonia) or flammable gas.
- Do not use this product at any place with liquid, oil, medical substances, dust, salt or iron contents.
- Do not use this product at any place with excessive induction trouble, static electricity or magnetic noise.
- Do not use this product at any place with possible thermal accumulation due to direct sunlight or heat radiation.
- When the product gets wet, the inspection is essential because there is a danger of an electric leakage or fire.
- Do not connect anything to the unused terminals.
- For DC types, please connect wires at the correct position after checking polarity of terminal.
- When product is disposed, treat as industrial waste.
- Since a heat sink corner is sharp, it would lead to a serious injury.
- When electricity flows, desktop or heat sink's corner temperature would be high so that it could lead people to suffer burns.
- When it is out of order, please separate SSR from heat sink and change only SSR.
- This model has epoxy molding for the purpose of safety, reliability and extends of the life.
- When applying an electric current, SSR is heated more and more. So, it has more durable at low heat sink temperature and ambient temperature.

Suffix code


| Model | Code | Information |
|-----------------------------------|-----------|---|
| SSR-3 | □ □ □ □ □ | 3-Phase Solid State Relay |
| Input Voltage | D | 5 - 24 V d.c. |
| | A | 100 - 240 V a.c. |
| Rated load current | 10 | 10 A |
| | 20 | 20 A |
| | 30 | 30 A |
| | 40 | 40 A |
| Rated load voltage | 2 | 90 - 264 V a.c. (Low voltage) |
| | 4 | 90 - 480 V a.c. (High voltage) |
| Operation method (Switching Mode) | Z | Zero Cross Switching (Standard product) |
| | R | Random Switching |

Dimension

[Unit : mm]

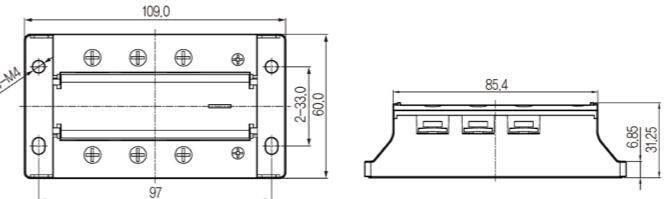


Equivalent Circuit

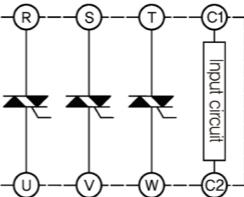


Connection

* This model does not have a fuse internally.
So we suggest using fast-acting fuse separately on the outside as following picture.

■ SSR-3D


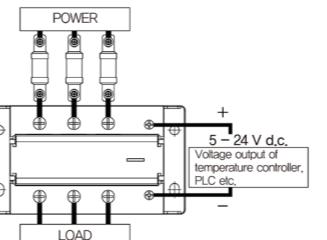


■ SSR-3A


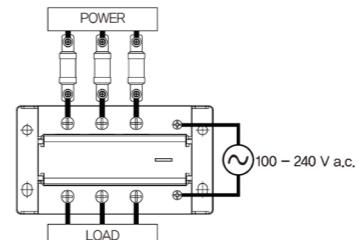


Input/Load/Surge current Characteristics


■ Input current Characteristics

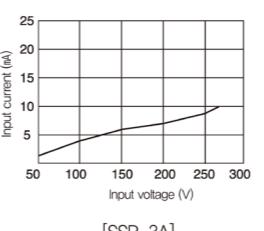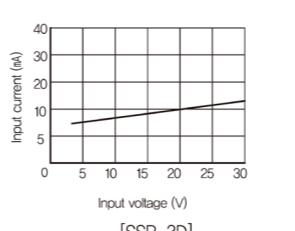

■ Load current Characteristics

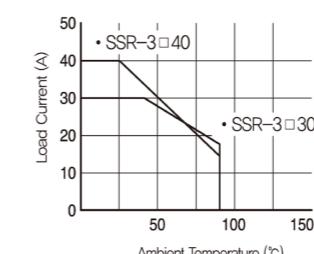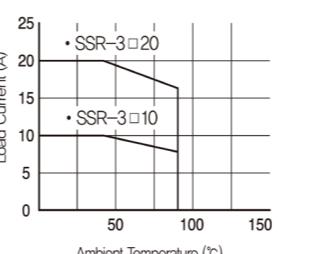


■ Surge current Characteristics

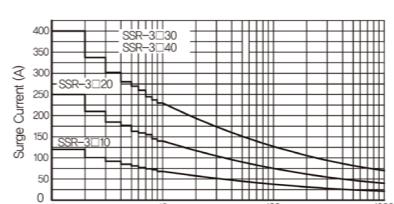


Installation intervals

- Please make intervals more than the sizes in the following picture.
- Please install wiring duct less than half the height of the heat sink to prevent the flow of air.
- It is good to use Hanyoung Nux's SSR in lower than ambient temperature 40 °C so, please use it lower than standard temperature.
- When installing the SSR, be sure to install the heat sink in the vertical direction.
- Unavoidably, if installed horizontally, the performance of the product will drop below 50 %

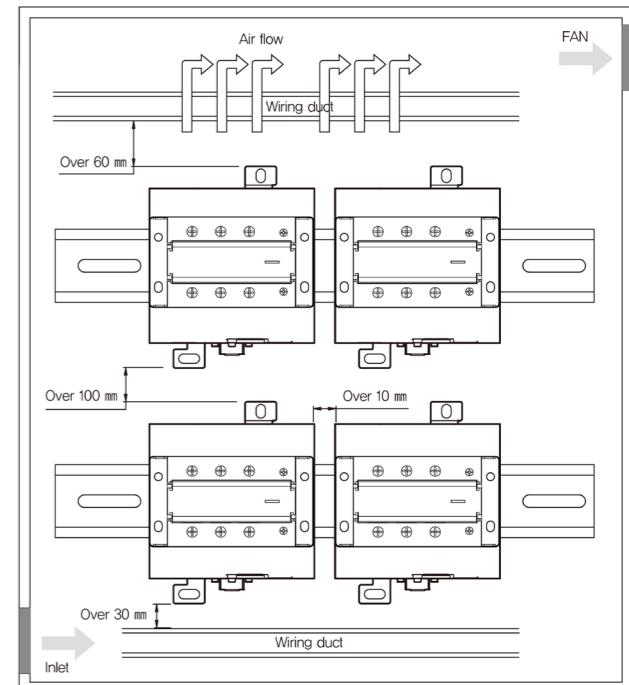

HEAT SINK

■ Model : HSM series

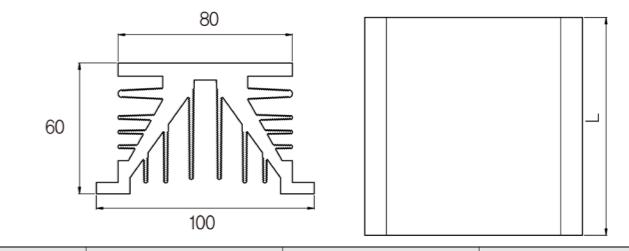


| Model | Applicable Model | Capacity(A) | Length(L) |
|---------|------------------|-------------|-----------|
| HSM-150 | SSR-3D10□ | 10 A | 150 mm |
| HSM-200 | SSR-3D20□ | 20 A | 200 mm |
| HSM-200 | SSR-3A30□ | 30 A | |
| HSM-250 | SSR-3A40□ | 40 A | 250 mm |

Precautions during the use of Heat Sink

- Using standard heat sink is mandatory for this product.
- Even the standard heat sink is used, SSR damage may occur if the environment temperature rises or if the ventilation does not work well. (Environment temperature : over 40 °C)
- The normal SSR element is damaged at the maximum temperature of 125 °C . When the temperature of heat sink is 85 °C , the temperature of the element reaches around 125 °C . Therefore, during operation, measure the temperature of heat sink.
- When you connect SSR onto the heat sink, heat-transmitting grease is needed for smooth heat transmission.
- To prevent separation by vibration, tighten up with bolts.
- Do not use any insulating materials such as wood, plastic or rubber. The standard heat sink must be greased on the bottom side as shown below and connected.

* The heatproof silicon grease must be applied thoroughly on the heat sink as well as the bottom of SSR. The case side of heat sink needs to be installed on up and down directions.

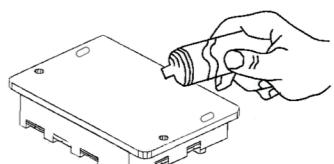

일반형

SSR-3 사용설명서

삼상 무접점릴레이

(주)한영네스의 제품을 구입하여 주셔서 대단히 감사합니다.
본 제품을 사용하시기 전에 사용설명서를 잘 읽은 후에 올바르게 사용해 주십시오.
또한, 사용설명서는 언제라도 볼 수 있는 곳에 반드시 보관해 주십시오.



KSA

국가인증

국가인증