

TECHNICAL DATA

Fluke 80i-110s AC/DC Current Clamp



Key features

- Current Range: 0.1 to 100A DC or 0.1 to 100A AC
- Basic Accuracy (DC to 1kHz): 100mV/A setting: 50mA to 10A +/- 3% of reading + 50mA 10mV/A setting: 50mA to 40A +/- 4% of reading + 50mA 40A to 80A +/- 12% of reading + 50mA 80 to 100A +/- 15% of reading
- Output Signal: 10A range: 100mV/A | 100A range: 10mV/A
- Bandwidth: 1Hz to 20kHz
- Working Voltage: 600V AC rms
- Maximum Conductor Size: 11.8 mm (.46 inch) diameter
- Safety Rating: IEC 1010 and CSA-C22.2 No. 1010-1 Installation Category II, Working Voltage 600V

Product overview: Fluke 80i-110s AC/DC Current Clamp

The 80I-110s is compatible with any Fluke ScopeMeter Test Tool, Power Harmonics Analyzer, Oscilloscope, Multimeter, or other voltage measurement device that has the following features: BNC input connectors or if using a meter convert the banana plugs to a BNC connector using the adapter PM9081/001.

Useful resources and rugged tools for Solar professionals



Specifications: Fluke 80i-110s AC/DC Current Clamp

Specifications	
Nominal current range	10 A, AC/DC
	100 A, AC/DC
Continuous current range	0.1 A - 10 A AC/DC
	1 A - 100 A AC/DC
Maximum non-destructive current	140 A - 2 kHz
Lowest measurable current	0.1 A
Basic accuracy	100 mV/A setting: 50 mA to 10 A \pm 3% of reading +50 mA
	10 mV/A setting: 50 mA to 40 A \pm 4% of reading +50 mA
	40 A to 80 A ±12% of reading +50 mA
	80 to 100 A ±15% of reading
Useable frequency	DC - 100 kHz
Output level(s)	10 A range: 100 mV/A
	100 A range: 10 mV/A
Zero error adjustment	Yes
Safety Specifications	
Safety	CAT II, 600 V
	CAT III, 300 V
Maximum voltage	600 V
Mechanical and General Specifications	
Warranty	1 year
Battery life	9 V, 55 h
Maximum conductor diameter	11.8 mm
Output cable length	1.6 m
BNC adapter	Yes



Ordering information



Fluke 80i 110s



Fluke. Keeping your world up and running.®

Fluke Europe B.V. P.O. Box 1186 5602 BD Eindhoven The Netherlands www.fluke.com/en ©2024 Fluke Corporation. All rights reserved. Data subject to alteration without notice. 04/2024

Modification of this document is not permitted without written permission from Fluke Corporation.

For more information call:

In Middle East/Africa

+31 (0)40 267 5100